



www.Offroaders.com

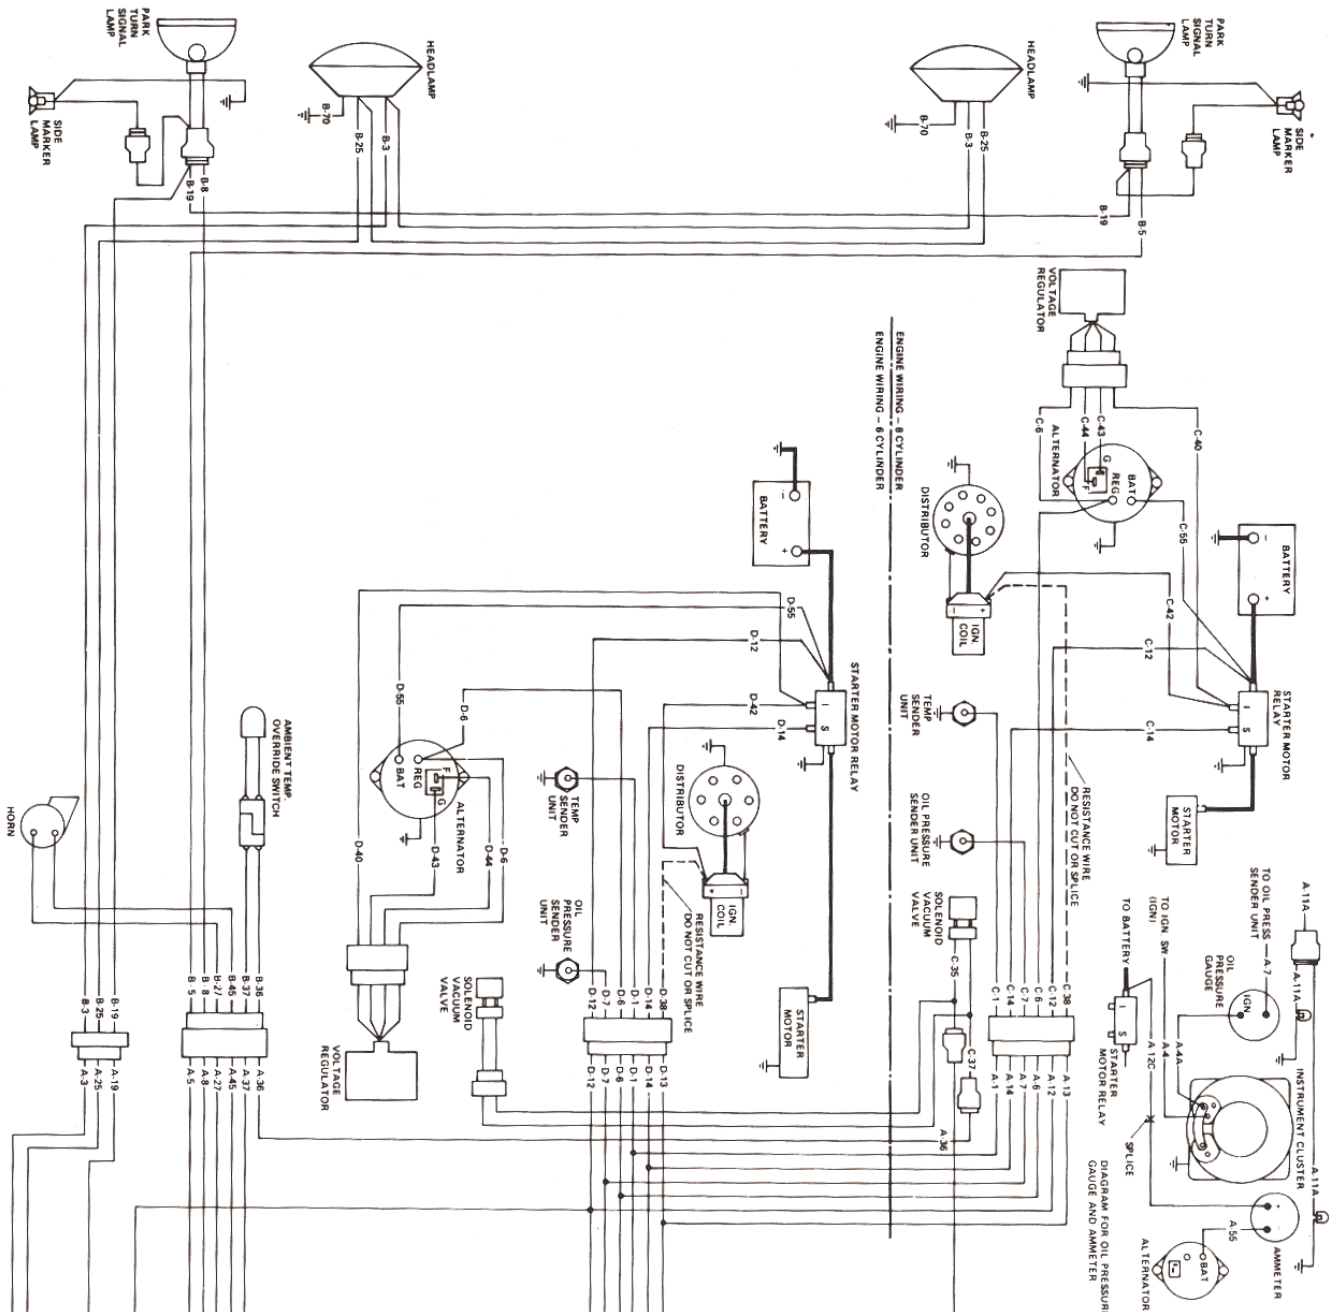

1972 and 1973 Jeep CJ5 wiring diagram

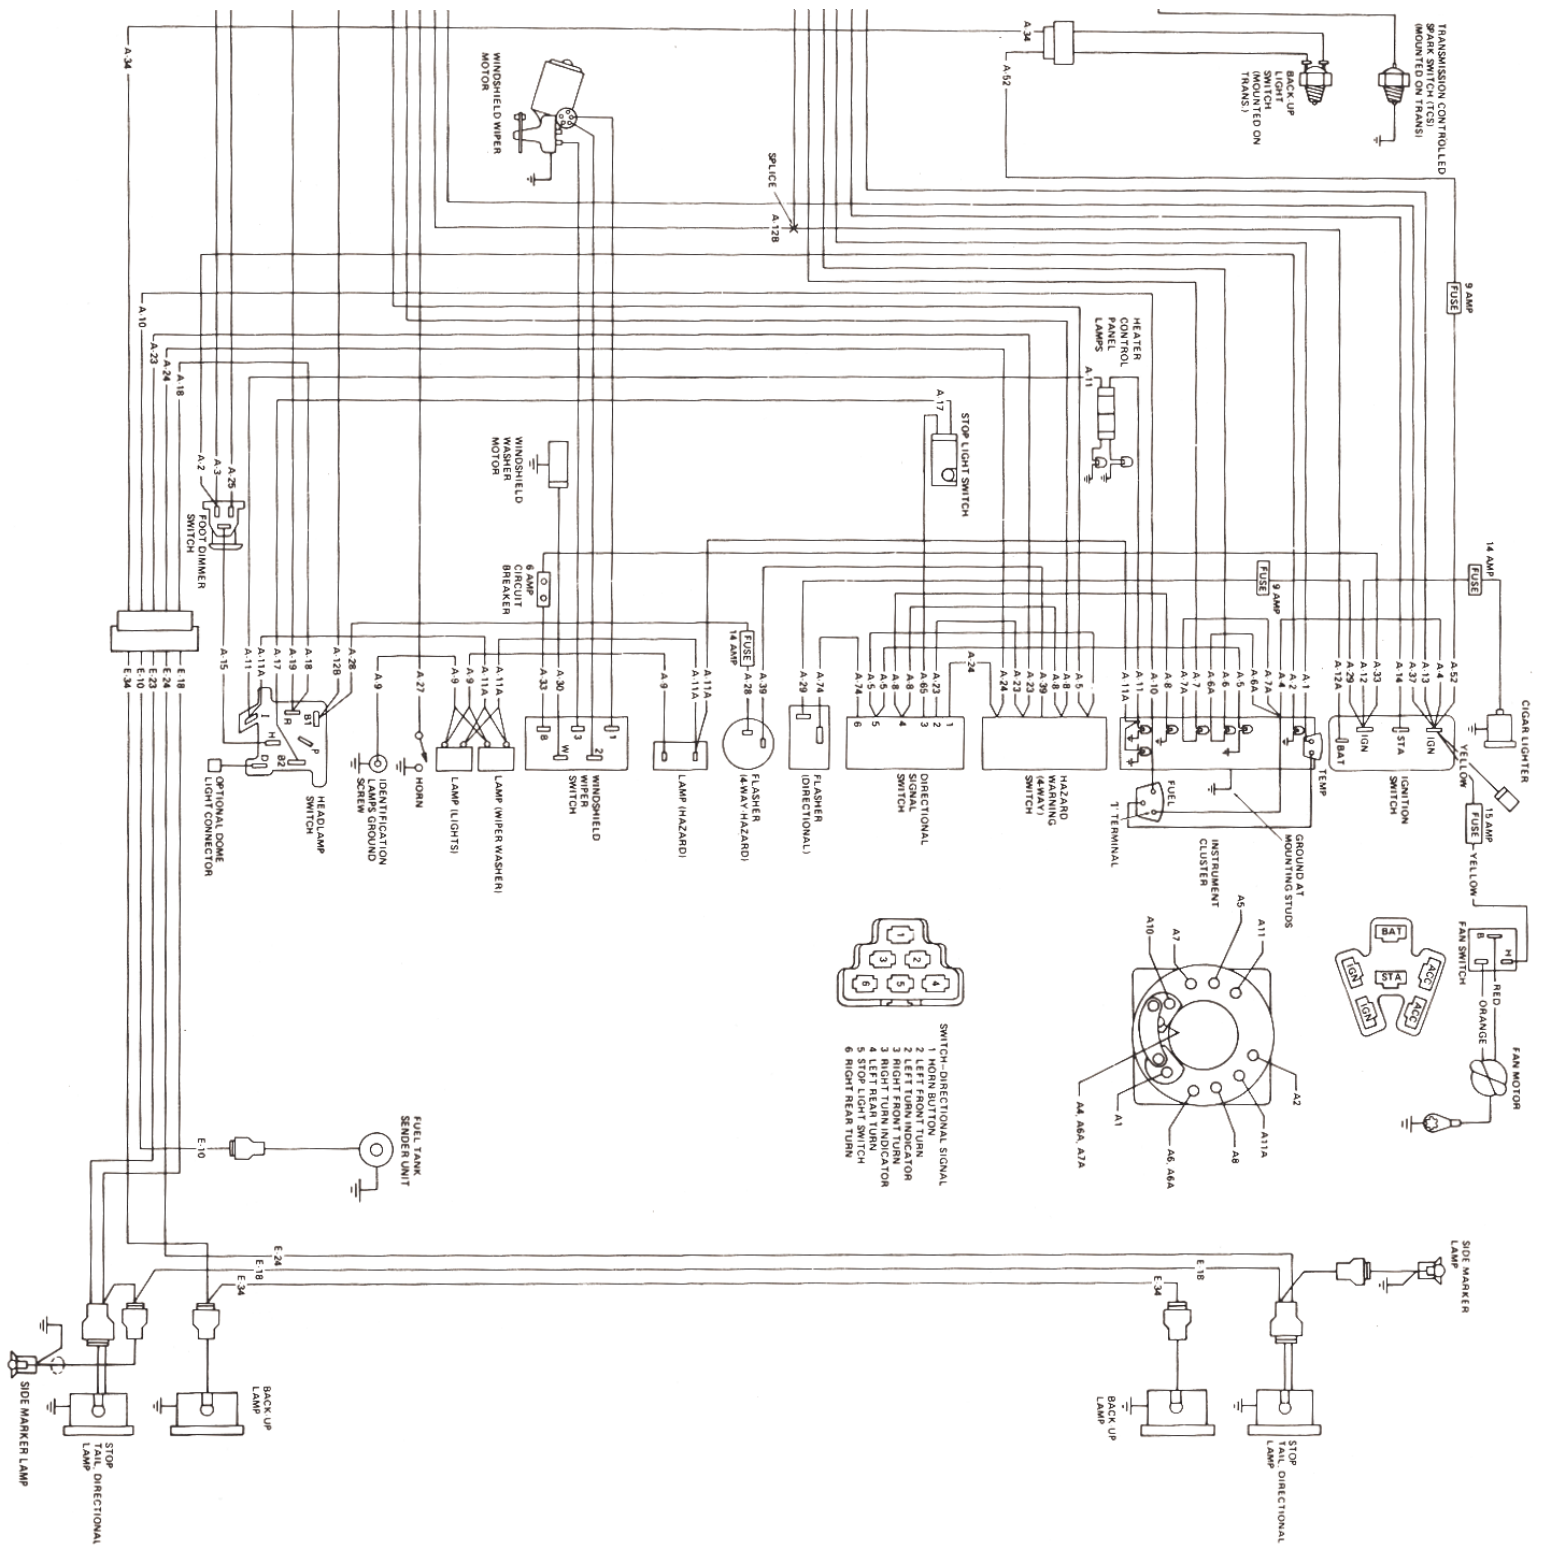

NO.	GA.	COLOR	INSTRUMENT AND CONTROL HARNESS
A-1	18	BLUE-YELLOW TR.	CONN. (TEMPERATURE SENDER) TO TEMPERATURE GAGE INDICATOR
A-2	18	WHITE	FOOT DIMMER SWITCH (HI-BEAM) TO INSTR. CLUSTER (HI-BEAM IND.)
A-3	14	RED-WHITE TR.	FOOT DIMMER SWITCH (HI-BEAM) TO HEADLAMP CONN. (HI-BEAM)
A-4	14	GREEN	IGN. SWITCH (IGN. TERM.) TO INSTR. CLUSTER VOLT REGULATOR
A-5	18	BLACK-WHITE TR.	CONN. SIG. LAMP FRONT RIGHT TO HAZARD WARNING SW. TO DIRECT SW. TO CLUSTER LAMP RIGHT TURN
A-6	18	GRAY	CONN. (ALTERNATOR-AUX. TERM.) TO INSTR. CHARGE IND. TO INSTR. VOLT REG.
A-7	18	PURPLE	CONN. (OIL PRESS. SENDER) TO OIL PRESS. IND. TO INSTR. VOLT REG.
A-8	18	YELLOW-BLACK TR.	CONN. SIG. LAMP FRONT LEFT TO HAZARD WARNING SW. TO DIRECT SW. TO CLUSTER LAMP LEFT TURN
A-9	16	BLACK	(GROUND.) FLASH MTG. TO LIGHT SW., WIPER & HAZARD LIGHTS
A-10	18	WHITE	CONN. (FRAME HARN.-GAS GA. TANK UNIT) TO INSTR. CLUSTER GAS GA. INDICATOR
A-11	18	RED-BLUE	LIGHT SWITCH "I" TERM. TO INSTR. CLUSTER LIGHTS TO HEATER LAMP
A-11A	18	RED BLUE TR.	LT. SWITCH (TERM. I) TO LAMPS LIGHTS, WIPER HAZARD TO INSTR. CLUSTER LAMP
A-12	10	RED	SPLICE TO CONN. (START SOLENOID-BATT. TERM.)
A-13	14	GREEN	IGNITION SWITCH (IGN. TERM.) TO CONN. COIL (+) TERM.
A-14	16	LT. BLUE	IGNITION SWITCH (START TERM.) TO CONN. (START MOTOR SOLENOID-START. TERM.)
A-15	14	GREEN	FOOT DIMMER SWITCH "B" TERM. TO LIGHT SWITCH "H" TERM.
A-17	16	BROWN	LIGHT SWITCH-BATT. (B-2) TO CONN. (STOP LITE SW.)
A-18	16	YELLOW	LIGHT SWITCH "R" TERM. TO CONN. (FRAME HARNESS-TAIL LIGHTS)
A-19	16	LT. BLUE	LIGHT SWITCH "R" TERM. TO CONN. (PARK. TERM.)
A-23	16	LT. BLUE	CONN. FRAME HARN. REAR LEFT TO HAZARD WARN. SW. TO DIRECT. SIG. SW. (LEFT TURN)
A-24		ORANGE	CONN. FRAME HARN. REAR RIGHT TO HAZARD WARN. SW. TO DIRECT. (RIGHT TURN) SIG. SW.
A-12A	12	RED	SPLICE TO CONN. (IGN. SWITCH-BATT.) CIGAR LIGHTER
A-12B	14	RED	SPLICE TO CONN. (LIGHT SW.) B-1
A-25	16	BLACK	FOOT DIMMER SW. (LO-BEAM) TO HEADLAMP CONN. (LO-BEAM)
A-27	18	BLACK YELLOW TR.	HORN TERM. TO CONN. (HORN BUTTON)
A-28	18	WHITE-RED TR.	LIGHT SW (B-1) FUSED TO CONN. (HAZARD FLASHER) FEED
A-29	18	RED	CONN. (IGN. SWITCH-ACC. TERM.) TO CONN. (DIRECT. SIGNAL FLASHER) FUSED
A-30	18	YELLOW	W/S WIPER SWITCH TO W/S WASHER MOTOR
A-33	14	RED-WH. TR	W/S WIPER SW. "B" TO IGN. (ACC. TERM.)
A-34	18	GREEN WH. TR	CONN. (BACK-UP LIGHT SW.) TO CONN. (FRAME HARN.-BACK-UP LTS.)
A-36	16	ORANGE	T.C. SWITCH TO IGN. OF IGN. SW. (IGN. TERM.)
A-37	16	ORANGE	T.C. SW. TO T.C. VACUUM SOLENOID
A-39	16	PINK	HAZARD FLASHER TO HAZARD SWITCH
A-45	14	RED-WH. TR.	CONN. (HORN TERM.) TO SPLICE
A-52	18	GREEN-WH. TR.	IGN. SWITCH (IGN. TERM.) FUSED TO CONN. (BACK-UP LIGHT SW.)
A-65	16	BROWN	CONN. (TURN SIGNAL SWITCH) TO CONN. (STOP LITE SW.)
A-74	18	WHITE	CONN. (TURN SIG. SWITCH-FLASHER TERM.) TO CONN. (FLASHER)
NO.	GA.	COLOR	HARNESS ASSY.-HEAD., PARK. & SIGNAL LAMPS
B-3	14	RED-WHITE TR.	CONN. (HI-BEAM) TO CONN. (HEADLAMP-HI-BEAM-LT.) TO CONN. (HEADLAMP) (HI-BEAM-RT.)
B-5	18	BLACK-WH. TR.	CONN. (TURN SIGNAL SW.-RT. TURN) TO CONN. (DIR. SIGNAL LAMP RIGHT TURN)
B-8	18	YELLOW BL. TR.	CONN. (TURN SIGNAL SW.-LT. TURN) TO CONN. (DIR. SIGNAL LAMP LEFT TURN)
B-19	16	LT. BLUE	CONN. (PARK. TERM) TO CONN. (PARK LAMP-LT) TO CONN. (PARK. LAMP RIGHT)
B-25	16	TAN	CONN. (LO-BEAM) TO CONN. (HEADLAMP-LO-BEAM-LT) TO CONN. (HEADLAMP) (LO-BEAM-RT)
B-27	18	BLACK-YEL. TR.	CONN. (STEER. COLUMN-HORN BUTTON) TO HORN TERM.
B-36	16	ORANGE	CONN. (IGN. SWITCH-IGN. TERM. TO CONN. (TEMP. OVERRIDE SW.)
B-37	16	ORANGE	CONN. (VACUUM SOLENOID SW. TO CONN. (TEMP. OVERRIDE SW.)
B-45	14	RED-WHITE TR.	CONN. (LIGHT SW.-BATT. TERM. TO HORN TERM.)
B-70	70	BLACK	HEADLAMP GROUND TO GROUND MTG. (2 CABLES)
NO.	GA.	COLOR	HARNESS ASSY.-ENGINE (V-8)
C-1	18	BLUE-YEL. TR.	CONN. (TEMP. INDICATOR) TO TEMP. SENDER
C-6	18	GRAY	CONN. (CLUSTER "H" TERM.) TO ALTERNATOR (AUX.) TO ALTERNATOR REGULATOR (AUX. TERM.)
C-7	18	PURPLE	CONN. (OIL PRESSURE INDICATOR) TO OIL PRESSURE SENDER
C-12	10	RED	START. SOLENOID ("B" TERM.) TO CONN. (CIRCUIT BREAKER FEED)
C-14	16	LT. BLUE	CONN. (IGN. SW. START TERM.) TO SOLENOID (START. TERM.)
C-35	16	BLACK	CONN. (TRANSMISSION SOLENOID) (T.C.S.) TO VACUUM SW.
C-37	16	ORANGE	CONN. (SENSOR SW.) (T.C.S.) TO VACUUM SW.
C-38	20	PINK	CONN. (IGN SW.-IGN. TERM.) TO COIL (+) TERM.-RESISTANCE WIRE 1.35 Ω MAX.
C-40	16	YELLOW	START. SOLENOID (IGN.) TO ALTERNATOR REGULATOR (IGNITION)
C-42	14	GREEN	COIL (+) TERM. TO STARTING SOLENOID (IGNITION)
C-43	14	BLACK	ALTERNATOR REGULATOR (GROUND TERM.) TO ALTERNATOR (GRD.)
C-44	18	GREEN-WH. TR.	ALTERNATOR REGULATOR (FIELD TERM.) TO ALTERNATOR (FIELD TERM.)
C-55	10	YELLOW	STARTING SOLENOID ("B" TERM.) TO ALTERNATOR (OUTPUT TERM.)
NO.	GA.	COLOR	HARNESS ASSY.-ENGINE (6 CYL.)
D-1	18	BLUE-YEL. TR.	CONN. (TEMP. INDICATOR) TO TEMPERATURE SENDER
D-6	18	GRAY	CONN. (CLUSTER) ("H" TERM.) TO ALTERNATOR (AUX. TERM.) TO ALTERNATOR REG. (FIELD TERM.)
D-7	18	PURPLE	CONN. (OIL PRESSURE INDICATOR) TO OIL PRESSURE SENDER
D-12	10	RED	START. SOLENOID ("B" TERM.) TO CONN. (CIRCUIT BREAKER FEED)
D-14	16	LT. BLUE	CONN. (IGNITION SW.-START. TERM.) TO SOLENOID (START. TERM.)
D-38	20	PINK	CONN. (IGNITION SW.-IGN. TERM.) TO COIL (+) TERM. RESISTANCE WIRE 1.80 Ω
D-40	16	YELLOW	START. SOLENOID (IGN.) TO ALTERNATOR REGULATOR (IGN.)
D-42	14	GREEN	COIL (+) TERM. TO START. SOLENOID (IGN.)
D-43	16	BLACK	ALTERNATOR REGULATOR (GRD. TERM.) TO ALTERNATOR (GRD. TERM.)
D-44	18	GREEN WH. TR.	ALTERNATOR REGULATOR (FIELD TERM.) TO ALTERNATOR (FIELD TERM.)
D-55	10	YELLOW	START. SOLENOID ("B" TERM.) TO ALTERNATOR (OUTPUT TERM.)
NO.	GA.	COLOR	CHASSIS WIRING HARNESS
E-10	18	WHITE	CONN. (GAS GAGE-INSTR. UNIT) TO CONN. (GAS GAGE-TANK UNIT)
E-18	16	YELLOW	CONN. (LIGHT SW.-"R" TERM.) TO CONN. (LT. TAIL LAMP & LT. MARKER LAMP)
E-23	16	LIGHT BLUE	CONN. (TURN SIGNAL SW.) TO CONN. (LEFT STOP & SIGNAL LT.)
E-24	16	ORANGE	CONN. (TURN SIGNAL SW.) TO CONN. (RT. STOP & SIGNAL LIGHT)
E-34	18	GREEN WH. TR.	CONN. (BACK UP LT. SW.) TO CONN. (BACK UP LIGHT (LT. & RT.))