





- 12E IGN TO SPURCE - A-
- 14 IGN TO STARTING-SOL ENDO
- 13B IGN TO TACH
- 67A IGN TO FUSE PANEL
- 67B IGN TO VOLT METER (+) TERMINAL
- 15 IGN TO SPURCE - B-
- 5A & 5B RIGHT TURN & HAZARD FRONT
- 8A & 8B LEFT TURN & HAZARD FRONT
- 23 & 23A LEFT TURN & HAZARD REAR
- 24 & 24A RIGHT TURN & HAZARD REAR
- 27 HORN BUTTON
- 28 HORN RELAY
- 29 BRAKE SWITCH & HAZARD FEED
- 24 FLASHER & DIRECTIONAL SIGNAL FEED

- 1 TEMP GAUGE
- 2 HI BEAM IND
- 4A OIL GAUGE
- 5C RT TURN IND
- 7 OIL GAUGE
- 8C LT TURN IND
- 11P PANEL L/S RIGHT
- 11Q PANEL L/S LEFT
- 11K OIL PRESSURE LT
- 11L VOL METER LT
- 57 BRK WARN LT (GND)
- 77 BRK WARN LIGHT CONN
- 77A BRK WARN LIGHT
- 1 FUEL GA IGN
- 5 FUEL GA SEND
- 11L AIR & OFF LT
- 11M TEMP & FAN LT

- 12E IGN TO SPURCE - A-
- 14 IGN TO STARTING-SOL ENDO
- 13B IGN TO TACH
- 67A IGN TO FUSE PANEL
- 67B IGN TO VOLT METER (+) TERMINAL
- 15 IGN TO SPURCE - B-
- 5A & 5B RIGHT TURN & HAZARD FRONT
- 8A & 8B LEFT TURN & HAZARD FRONT
- 23 & 23A LEFT TURN & HAZARD REAR
- 24 & 24A RIGHT TURN & HAZARD REAR
- 27 HORN BUTTON
- 28 HORN RELAY
- 29 BRAKE SWITCH & HAZARD FEED
- 24 FLASHER & DIRECTIONAL SIGNAL FEED

- 1 TEMP GAUGE
- 2 HI BEAM IND
- 4A OIL GAUGE
- 5C RT TURN IND
- 7 OIL GAUGE
- 8C LT TURN IND
- 11P PANEL L/S RIGHT
- 11Q PANEL L/S LEFT
- 11K OIL PRESSURE LT
- 11L VOL METER LT
- 57 BRK WARN LT (GND)
- 77 BRK WARN LIGHT CONN
- 77A BRK WARN LIGHT
- 1 FUEL GA IGN
- 5 FUEL GA SEND
- 11L AIR & OFF LT
- 11M TEMP & FAN LT

# WIRING DIAGRAM CJ MODELS

# 1974 and 1975 model wiring diagram key

NOMENCLATURE	LOCATION		
Air & Defroster Light	C-8	Electronic Ignition Pack, V-8	A-2
Alternator, V-8 (Motorola)	B-3	Fuel Gauge	C-8
Alternator/Regulator (Delco), 6 Cylinder	C-3	Fuel Sender	D-10
Backup Lamp, Left Rear	D-11	Fuel Sender Connector	E-10
Backup Lamp, Right Rear	B-11	Fuse Panel	B-6
Backup Lamp Switch, 6 Cylinder	B-5	Fusible Link, Ignition Circuit	A-4
Backup Lamp Switch, V-8	D-2	Hazard Light	D-8
Battery	B-4	Hazard Switch	B-9
Battery Ground Cable	B-4	Headlamp, Left	D-1
Brake Failure Switch	D-3	Headlamp, Right	B-1
Brake Warning Light Connector	D-8	Headlamp Ground, Left	D-1
Brake Warning Light	D-8	Headlamp Ground, Right	B-1
Brake Warning Light Ground	D-8	Heater Blower Motor	A-5
Cigar Lighter	A-8	Heater Blower Switch	B-8
Coil, 6 Cylinder	D-4	High Beam Indicator	C-8
Coil, V-8	C-2	Horn	D-4
Constant Voltage Regulator	C-8	Horn Button	B-8
Dimmer Switch	E-6	Ignition Switch	A-8 & A-9
Directional Signal Switch	B-9 & B-10	Instrument Cluster	C-8
Distributor, 6 Cylinder	D-3	Instrument Panel Lights Ground	D-8
Distributor, V-8	C-3	Light Switch	E-8 & E-9
Electronic Ignition Pack, 6 Cylinder	C-2	Light Switch Light	E-8
Marker & Reflector, Left Front	E-2	Splice "M"	D-1
Marker & Reflector, Left Rear	E-10	Starter Solenoid	B-4
Marker & Reflector, Right Front	A-2	Starting Motor	C-4
Marker & Reflector, Right Rear	A-10	Steering Column Connector	B-9
Oil Gauge	C-8	Stoplamp Switch	A-8
Oil Pressure Gauge Light	C-8	Tachometer Connector	A-8
Oil Pressure Sender	C-4	Tail, Stop & License Lamp, Left Rear	E-11
Panel Lights, Left	C-8	Tail & Stop Lamp, Right Rear	A-11
Panel Lights, Right	C-8	Temperature & Fan Light	C-8
Park & Signal Lamp, Left Front	D-1	Temperature Gauge	C-8
Park & Signal Lamp, Right Front	A-1	Temperature Sender	C-3
Splice "A"	C-7	Transmission Control Switch	A-4
Splice "B"	B-6	Turn Indicator & Hazard, Left	C-8
Splice "C"	B-8	Turn Indicator & Hazard, Right	C-8
Splice "D"	B-7	Vacuum Solenoid	B-4
Splice "E"	A-3	Voltage Regulator, V-8	B-3
Splice "F"	A-4	Voltmeter	C-8
Splice "G"	C-2	Voltmeter Light	C-8
Splice "H"	E-1	Windshield Washer Motor Lead	D-5
Splice "J"	D-1	Windshield Wiper Motor	C-5 & E-9
Splice "K"	A-1	Windshield Wiper & Washer Switch	E-8
Splice "L"	A-1	Windshield Wiper & Washer Switch Lights	D-8